

AGES FIVE AND UP

Video Art™

ACTIVITY™
cartridge



ON THE
MOVE



TOYS LTD.
Asst. 7150

HOW TO USE AND CARE FOR YOUR VIDEOART™ ACTIVITY CARTRIDGE™



USING YOUR ACTIVITY CARTRIDGE:

1. Be sure that the "Power On" indicator is off before plugging the cartridge in the VideoArt.
2. Plug in the cartridge label side up (see drawing).
3. Press the power button so that the red "Power On" indicator light is on.
4. The title "page" of the


cartridge will appear on the screen for 20 or so seconds or until you press both clear buttons at the same time.

CARING FOR YOUR ACTIVITY CARTRIDGE — Precautions:

1. This is high precision electronic software. It should not be stored in a place that is very hot or cold. Never hit it or drop it. Do not take it apart and never force it into the VideoArt unit.
2. Avoid touching the connectors, do not get them wet or dirty. Doing so may damage the cartridge.
3. Do not clean with benzene, paint thinner, alcohol or other such solvents.

WHAT YOU WILL SEE...

After the title page of your VideoArt cartridge you will see the first page and you can immediately start to color.

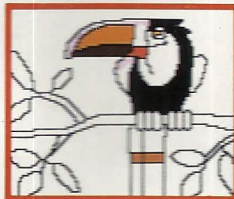

When the page you would like to color appears on the screen, use your color selector to either pick a color you want to use or to change the background color of the drawing. As you draw, the

picture fills in, like the pictures you see above. When you are finished you can either turn the page to start a new drawing or save your artwork by recording it on video tape!



ON THE MOVE

